




Lights, Camera, Interaction!, Inc.

Plush Rocking Horse Assembly Instructions

Adult assembly required,
unassembled product contains small parts.

PARTS INCLUDED	
ITEM	QTY.
PLUSH HORSE	1
WOODEN BASE	1
BOLTS	4
ALLEN KEY	1

1

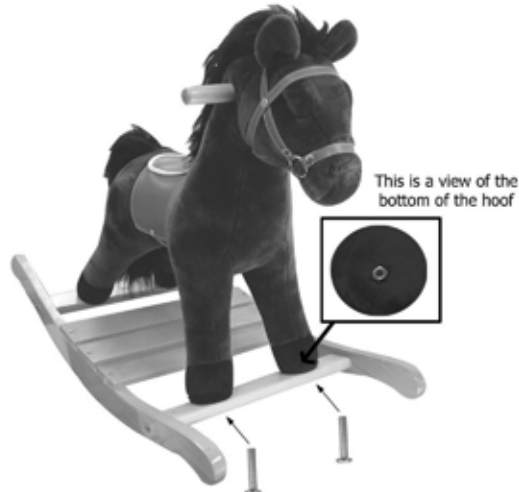


First, place the horse onto the base. Take two of the bolts and bolt the two front legs onto the base piece using the Allen key. The bolts go through the bottom of the base and into the hooves of the horse. Make sure the bolts are tightly attached.

2



Then, turn the horse around and take the two bolts remaining and bolt the hind legs into the base using the Allen key. You may need to pull the hind legs back to align them with the holes in the rear of the base. The bolts go through the bottom of the base and into the hooves of the horse. Make sure these bolts are tightly attached.

3

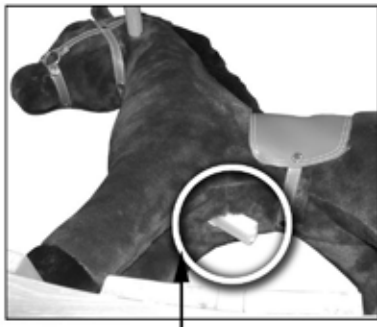


The battery compartment is located underneath the body of the horse. Open the zipper or Velcro to access the battery compartment. 2AA batteries are required (Not Included). After batteries are inserted into the battery compartment, place the battery compartment back into the horse and close the opening.

4



Finally, this is what your rocking horse should look like when the assembly is complete.



2 AA batteries are required. (Not Included)
Use phillips tip screwdriver to remove screw from battery cover. Insert as illustrated. Replace battery cover and screw before use.

CAUTION: Do not mix old and new batteries. Do not mix alkaline and standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.